

Pilot Commander	Pilot Operator
"Missile prep"	Rotate missile station selector to live missile and verify valid launch authorisation tone "Tone"
Target within 60° deflection and 15° elevation from bore "Obs on"	Select B2 obsrv switch on "Obs on"  After 8-12 seconds, attempt to move sight  Confirm sight is free "Gimbal is free"
Observe free floating reticule location if no other threats present	Acquire target/target area "Visual"
Continue normal manoeuvres within gimbal limits Do not pursue free floating reticule	Range target using rangefinder lines  Report range as required, when within effective range "Range"
Manoeuvre to place free floating reticule within inner circle of fixed reticule	Return reticule to target "Target"
Verify valid launch authorisation tone  "Fire"	Verify valid launch authorisation tone and red lamp on upper eyepiece  Launch missile  Confirm missile off rail and under guidance "Missile"
Perform manoeuvres within gimbal limits  Immediately relax flight controls	Track target continuously  When missile within 5 seconds from impact and not in steady flight "Steady"
"Obs off"  Manoeuvre to egress	Confirm missile detonation "Shack" "Target/no joy"  Select B2 obrv switch off "Obs off"
Note: Do not manoeuvre out of gimbal limits ±60° deflection and ±15° elevation from free floating reticule	