




Direction	Duration	HSD	TGP	HUD	FCR	WPN
NWS A/R DISC MSL STEP Button						
On Ground:	-	Toggles Nose Wheel Steering				
Air Refuel Switch on:	-	Disconnects Refueling Boom Latching				
A-A or EO mode:	-	A-A or EO mode: cycles to next weapon station				
A-G mode:	-	A-G mode: Cycles CCRP, CCIP, DTOS modes				
Display Management Switch (DMS)						
▲	-		SOI to HUD		SOI to HUD	SOI to HUD
▼	-		SOI MFD Swap	SOI to MFD	SOI MFD Swap	SOI MFD Swap
▶	-	Next Right MFD Format				
◀	-	Next Left MFD Format				
Target Management switch (TMS)						
▲	-	Designate	Point Track	DTOS/EO-vis Designate	RWS Spotlight / ACM BORE	Track

▼	-	Drop		Target Reject	Target Reject	Target Reject

▶	-		Area Track		TWS bug step / ACM rotary	
	---				TWS/RWS Swap	
◀	-		Polarity Swap		Interrogate All	Polarity Swap
	---				Interrogate TGT	
Expand/FOV Button						
	-	Cycles SOI FOV				
Countermeasure Management Switch (CMS)						
▲	-	Dispense selected program				
▼	-	Gives consent in SEMI and AUTO				
▶	-	Disables AUTO				
◀	-					
Weapon Release						
Press and Hold		Release Weapon				
Trim Switch						
▲	-	Trim Pitch Down				
▼	-	Trim Pitch Up				
▶	-	Trim Roll Right				
◀	-	Trim Roll Left				
Trigger						
First Stage		Fires TGP Laser				
Second Stage		Fires GUN				

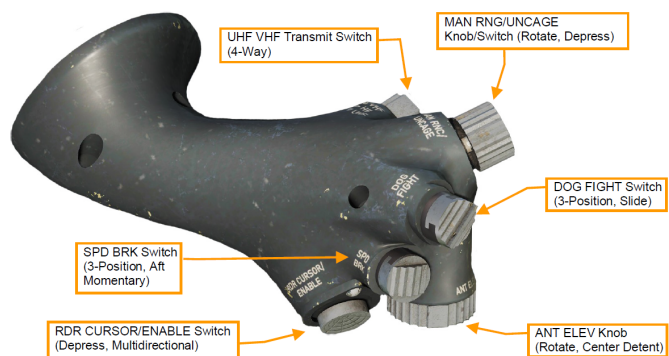

Direction	Duration	HSD	TGP	HUD	FCR	WPN
UHF VHF Transmit Switch						
▲	-	VHF				
▼	-	UHF				
Speedbrake Switch						
▲	-	Speedbreak closed				
▼	-	Speedbreak open				
Manual Range/Uncage/Gain Control						
Knob	A-A Guns Mode	Selects manual range for gunsight				
Cursor depress	A-A Mode	Uncages Aim-9 seeker				
Knob	A-G Mode	Controls Ground radar gain				
Cursor depress	A-G Mode	Uncages AGM-65 seeker				
Dogfight/Missile Override Switch						
◀	-	Dogfight Override				
■	-	Normal				
▶	-	Missile Override				
Antenna Elevation Knob						
Forward and back		Manually set radar antenna elevation angle				
Cursor/Enable Control						
▲	-		TGP Video Slew Up		RDR Cursor Up	Seeker Slew Up
▼	-		TGP Video Slew Down		RDR Cursor Down	Seeker Slew Down
▶	-		TGP Video Slew Right		RDR Cursor Right	Seeker Slew Right
◀	-		TGP Video Slew Left		RDR Cursor Left	Seeker Slew Left
Cursor depress	A-A Mode	BORE/SLAVE AIM-9 and AIM-120				
Cursor depress	A-G Mode	Cycle PRE/VIS/BORE				