

<u>Ordinance</u> AGM-65D/G <i>"Maverick"</i>	<u>Guidance</u> IR (BORE)
BSGT alignment <i>(opt.)</i>	Pre- or In-flight
Set FCR to ON	RH
Set MASTER ARM to ARM	LF or HOTAS
Set A/G mode	ICP or HOTAS
Select AG65	SMS
Select MSL station	SMS or NWS
MODE to BORE	SMS
Select RIP <i>(as required)</i>	SMS
Select PWR OFF <i>(or auto-cooldown opt.)</i>	SMS
- PWR ON after cooldown (3 min.)	SMS
Select CNI DED page	Dauber RTN
Select WPN	SMS
- Camera feed is on	WPN
- MODE is PRE	WPN
Select TRACK POLARITY <i>(for AGM model)</i>	WPN / TMS/I
Select WPN as SOI	DMS/d
Select FOV to NARO / WIDE	TPG
Slew MAV RETICLE to target	WPN / HUD
- Inside MLE	TPG / WPN / HUD
Attempt missile lock	TMS/u
- Confirm missile lock	TPG / WPN / HUD
Select WEAPON RELEASE	HOTAS