

<u>Ordinance</u>	<u>Guidance</u>
AGM-65H/K "Maverick"	EO (PRE+RDR)
<b>BSGT alignment</b> <i>(opt.)</i>	<b>Pre- or In-flight</b>
<b>Set FCR to ON</b>	<b>RH</b>
<b>Set A/G mode</b>	<b>ICP or HOTAS</b>
<b>Set MASTER ARM to ARM</b>	<b>LF or HOTAS</b>
<b>Select AG65</b>	<b>SMS</b>
<b>Select MSL station</b>	<b>HOTAS NWS</b>
<b>MODE to PRE</b>	<b>SMS</b>
<b>Select RIP</b> <i>(as required)</i>	<b>SMS</b>
<b>Select PWR OFF</b> <i>(or auto-cooldown opt.)</i>	<b>SMS</b>
- PWR ON after cooldown (3 min.)	SMS
<b>Select WPN</b>	<b>SMS</b>
- Camera feed is on	WPN
- MODE is PRE	WPN
<b>Select TRACK POLARITY</b> <i>(for AGM model)</i>	<b>WPN / TMS/I</b>
<b>Set other MFD to FCR page</b>	<b>MFD</b>
<b>Select GMT mode</b>	<b>FCR</b>
<b>Select FCR MFD as SOI</b>	<b>DMS/d</b>
- Crosshair is on SPI or Snowplow	FCR / HUD
<b>Slew to target</b>	<b>Mini-stick</b>
<b>Designate target (GMTT)</b>	<b>TMS/u</b>
<b>Select WPN MFD as SOI</b>	<b>DMS/d</b>
<b>Select FOV to NARO / WIDE</b>	<b>WPN</b>
- Inside MLE (7.5 nm)	WPN / HUD
<b>Attempt missile lock</b>	<b>TMS/u</b>
- Confirm missile lock	WPN / HUD
- Inside effective range	WPN / HUD
<b>Select WEAPON RELEASE</b>	<b>HOTAS</b>