

<u>Ordinance</u> CBU-103/105 WCMD	<u>Guidance</u> INS ( <i>PRE+TGP</i> )
Set FCR to ON	RH
Set RIGHT HDPT to ON	RH
Set LASER ARM to ARM	LF
Set MASTER ARM to ARM	LF or HOTAS
Set A/G mode	ICP or HOTAS
Select CB105	SMS
Select PWR OFF	SMS
- System Status is RDY and PWR ON	SMS
MODE to PRE	SMS or NWS
Select CNTL page	SMS
Select BA ( <i>2,000 ft recommended</i> )	CNTL
Select CNTL	CNTL
Select RIP ( <i>Single / Pairs Long / Pairs Lat</i> )	SMS
Select SEPARATION ( <i>ft.</i> )	SMS
Select CNI DED page	Dauber RTN
Select the target STPT	ICP
Navigate towards STPT	HUD
Select TGP MFD as SOI	DMS/d
Set Area / Point Track on STPT	TMS/r / TMS/u
Slew to target	Mini-stick
Select Sensor Mode ( <i>TV / BHOT / WHOT</i> )	SMS / TMS/l
Select FOV to NARO / WIDE	TPG
Select Zoom Level	TPG / MAN RNG
Set Area / Point Track on STPT ( <i>or Snowplow</i> )	TMS/r / TMS/u
Steer to ASL	HUD
Hold WPN RELEASE	HUD