

| <u>Ordinance</u> CBU-87/97 | <u>Guidance</u> Unguided (CCIP) |
|---|------------------------------------|
| Set FCR to ON | RH |
| Set MASTER ARM to ARM | LF or HOTAS |
| Set A/G mode | ICP or HOTAS |
| Select CB87B | SMS |
| Select PROF1 | SMS |
| MODE to CCIP | SMS or NWS |
| Select SGL / PAIR | SMS |
| Select release interval (ft.) | SMS |
| Select release pulses (for multi. releases) | SMS |
| Select FUZE to NOSE / TAIL / NSTL* | SMS |
| - BA=1,500 ft. | SMS |
| - System Status is RDY | SMS |
| Place FPM 2000 ft. past target | HUD |
| Align BFL to target | HUD |
| - Pipper climbs to target | HUD |
| Select WPN RELEASE | HOTAS |

* **NOSE**=Dispense immediately, **TAIL**=Disarmed, **NSTL**=As programmed