

<u>Ordinance</u> GBU-38/31 JDAM	<u>Guidance</u> GPS (PRE+TGP)
Weapons Prep	Pre-flight
Set FCR to ON	RH
Set RDR ALT to ON	RH
Set RIGHT HDPT to ON	RH
Set LASER ARM to ARM	LF
Set MASTER ARM to ARM	LF or HOTAS
Set A/G mode	ICP or HOTAS
Select GB38	SMS
Select PWR OFF <i>(or auto-cooldown opt.)</i>	SMS
- PWR ON after countdown	SMS
Select MSL station	SMS or NWS
Select PROF1	SMS
Select CNTL page	SMS
Select AD to set delay	CNTL
Select AIR / GND / GND DLY	CNTL
Select FD <i>(only if GND DLY set)</i>	CNTL
Select IMP ANG	CNTL
Select IMP AZ	CNTL
Select IMP VEL	CNTL
Select CNTL page to return to SMS	CNTL
Deployment	
MODE to PRE	SMS
Select TGP page	SMS
Select CNI DED page	Dauber RTN
Select the target STPT	ICP
Navigate towards STPT	HUD
Select TGP MFD as SOI	DMS/d
Set Area / Point Track on STPT	TMS/r / TMS/u
Slew to target	Mini-stick
Select Sensor Mode <i>(TV / BHOT / WHOT)</i>	SMS / TMS/l
Select FOV to NARO / WIDE	TPG
Select Zoom Level	TPG / MAN RNG
Set Area / Point Track on STPT <i>(or Snowplow)</i>	TMS/r / TMS/u
Steer to ASL	HUD
Hold WPN RELEASE	HOTAS