

<u>Ordinance</u>	<u>Guidance</u>
M61A1 Canon <i>(opt.Targeting Pod)</i>	Unguided
Set FCR to ON	RH
Set RIGHT HDPT to ON <i>(opt. TGP)</i>	RH
Set LASER ARM to ARM <i>(opt. TGP)</i>	LF
Set MASTER ARM to ARM	LF or HOTAS
Set A/G mode	ICP or HOTAS
Select GUN	SMS
MODE to STRF	SMS or NWS
Select RNG <i>(rec. 2,500-7,000 ft.)</i>	SMS
- System Status is RDY	SMS
20°- 30° dive	HOTAS
Set Gun Pipper on target	HUD
Depress laser <i>(opt. TGP)</i>	HOTAS
- In-Range Cue on reticle	HUD
Hold trigger to fire	HOTAS