

<u>Ordinance</u>	<u>Guidance</u>
Mk82/83/84	Unguided (CCIP)
Set FCR to ON	RH
Set MASTER ARM to ARM	LF or HOTAS
Set A/G mode	ICP or HOTAS
Select M82	SMS
Select PROF1	SMS
MODE to CCIP	SMS or NWS
Select SGL / PAIR	SMS
Select release interval (ft.)	SMS
Select release pulses (for multi. releases)	SMS
Select FUZE to NOSE / TAIL / NSTL	SMS
- System Status is RDY	SMS
Place FPM 2000 ft. past target	HUD
Align BFL to target	HUD
- Pipper climbs to target	HUD
Select WPN RELEASE	HOTAS