

<u>Ordinance</u>	<u>Guidance</u>
Mk82/83/84 <i>(with Steerpoint)</i>	Unguided <i>(CCRP)</i>
Select CNI DED page	ICP
Select the target STPT	ICP
Set FCR to ON	RH
Set MASTER ARM to ARM	LF or HOTAS
Set A/G mode	ICP or HOTAS
Select M82	SMS
Select PROF2	SMS
MODE to CCRP	SMS or NWS
Select SGL / PAIR	SMS
Select release interval <i>(ft.)</i>	SMS
Select release pulses <i>(for multi. releases)</i>	SMS
Select FUZE to NOSE / TAIL / NSTL	SMS
- <i>System Status is RDY</i>	SMS
Select HUD as SOI	TMS
- <i>"BALL & CHAIN"</i>	HUD
-25° to set vector on target	HUD
Slew TDC to select target	HUD
Steer to ASL	HUD
Hold WPN RELEASE	HUD