

STEP		PROCEDURE	VALUE	LOCATION
BEFORE START CHECKS				
1		EJECTION SEAT	SAFE	
2		PARKING BRAKE	SET	
3		MASTER ARM	SAFE	
START CHECKLIST				
1		BATTERY POWER	ON	R. CONSOLE
2		FIRE TEST	A & B	L. CONSOLE
3		CHECK APU ACC.	LIGHT OFF	
4		APU	ON	L. CONSOLE
5		ENGINE CRANK	RIGHT	L. CONSOLE
6		WAIT 25 RPM	START R ENGINE	
7		CHECK ENG TEMPS	<750°C	
8		MASTER CAUTION		
9		SWITCH L. & R. TDIs		
10		TURN ON UHF		
11		ALTITUDE SWITCH	RADAR	
12		MPCD	ON	
13		BLEED AIR	RESET	R. CONSOLE
14		CLOSE CANOPY		
15		CHECK PRESURISATION GAUGE		
16		CHECK L. DDI NO '2's OR 'R's		
17		LIGHT TEST		
18		ENGINE CRANK	LEFT	L. CONSOLE
19		WAIT 25 RPM	START L ENGINE	
20		CHECK ENG TEMPS	<750°C	
21		CHECK L. DDI NO '1's OR 'L's		
22		OBOGS	ON	
23		HOOK BYPASS	AS REQUIRED	L. CONSOLE
24		RADAR	OPERATE (OPR)	
25		INS	GROUND (GND)	
26		FCS	RESET	L. CONSOLE
27		SET FLAPS	HALF	L. CONSOLE
28		FCS BIT TEST ('Y' KEY + R. OBS 20)		
29		SET LUZU TIME		C. CONSOLE
30		SET FLAPS	UP	L. CONSOLE
31		CHECK SURFACES		
32		SET FLAPS	HALF	L. CONSOLE
33		TAKE OFF TRIM		L. CONSOLE
34		HOOK	DOWN	R. CONSOLE
35		PITOT HEAT	ON	R. CONSOLE
36		AV COOL	EMERG	R. CONSOLE
37		PROBE	EXTEND	L. CONSOLE
38		SPEED BRAKE	EXTEND	
39		LAUNCH BAR	EXTEND	
40		SET TACAN	AS REQUIRED	
41		SET ILS	AS REQUIRED	
42		SET IFF	AS REQUIRED	
43		SET INS	NAV	
44		SET RADAR ALTIMETER	AS REQUIRED	
45		SET BARO ALTIMETER	AS REQUIRED	
46		UNCAGE STANBY ALTITUDE		
47		SET BINGO FUEL	AS REQUIRED	
48		SWITCH ALR-67 POWER	ON	C. CONSOLE (B. JOY)
49		LAUNCH BAR	RETRACT	
50		SPEED BRAKE	RETRACT	
51		PROBE	RETRACT	
52		HOOK	UP	
53		PITOT HEAT	AUTO	
54		AV COOL	NORM	
55		EXTERNAL LIGHTS	AS REQUIRED	

C  
H  
E  
C  
K

C  
H  
E  
C  
K